

 
SOREX wirelessKey

Your mobile phone is the key!



User manual
wirelessKey Professional

1. Security data for your wirelessKey Professional



MAC – Address:	The MAC-Address is the worldwide uniquely assigned identification number for your Bluetooth chip.
Pairing-PIN:	The Pairing-PIN is utilized to authorize new mobile phones as keys by pressing the multifunction button. On delivery of the wirelessKey the Pairing-PIN is the same for all mobile phones that are being assigned, but it can be adjusted with the proper software.
Delete-PIN:	Authorized mobile phones can be deleted from the wirelessKey module with the Delete-PIN code by using the multifunction button.
Config-PIN for PC:	A computer can be connected to the wirelessKey module for software set-up by using the Config-PIN.
Login-PW:	Upon first connection with the wirelessKey module, the login password has to be entered into the configuration software. Further details can be found in your configuration software manual. The login password is requested for software versions 1.2 and up.

2. Table of contents

	Page
1. Security data for your wirelessKey Professional	2
2. Table of contents	3
3. Introduction	4
4. Safety instructions	4
5. General assembly instructions	5
6. Description of operating modes	7
7. Description of user configuration	7
7.1 Addition of mobile phone	7
7.2 Removal of mobile phone	10
7.3 Deletion of all users (Reset)	11
7.4 PC software set-up	12
8. Opening procedure with authorized mobile phones	12
9. Summary of adaptable locks	13
10. Combination with wall pushbuttons	16
10.1 Summary of adaptable pushbuttons	16
10.2 Application overview	17
11. Care and maintenance	17
12. Electronic connection specifications	18
13. Terminal connection diagram: Simons Voss digital cylinder	20
14. Terminal connection diagram: Electric latch bolt	21
15. Tested mobile phones	22
16. Error sources	24
17. Technical specifications	26
17.1 SOREX wirelessKey	26
17.2 Bluetooth	26
18. Warranty and liability	27
19. Certifications	27
20. Overview pushbutton operation	28
21. Support	28

3. Introduction

Congratulations and thank you for purchasing the SOREX wirelessKey. The wirelessKey Professional series forms the network compatible version of the SOREX Company's access-system product series and is based on Bluetooth technology. The system enables every Bluetooth capable mobile phone to be used as key and open front doors, sliding doors, garage doors and many more.

4. Safety instructions

Please note that installation of the SOREX wirelessKey Professional module may require direct contact with live circuits.

These operations should only be conducted by qualified personnel.

SOREX shall not be liable for any incidental or consequential damages that occur during the installation of the wirelessKey Professional system.

Please contact a partner / authorized company near you for the installation of the system.

Please note that the wirelessKey Professional module may not be connected directly to 230V as the equipment will be damaged. The voltage supply is 6-24V direct current.

Operation over 230V current is only possible with the enclosed adaptor.

When assembling the wirelessKey Professional module near 230V circuits, please consider the standards and guidelines in effect for the spacing of cables.

The module may never be assembled in a flush mounted socket together with 230V cables. Please consider the country specific rules and regulations as well as the EIB-guidelines, if applicable.

Please note that the device at hand is electrical and has to be shielded from external influence such as extreme temperatures, contact with water and so forth.

For further information regarding the assembly, please contact a SOREX partner near you.

Additional details regarding partners near you are listed in the support chapter of this manual.

5. General assembly instructions


The SOREX wirelessKey Professional module can be mounted directly to the door area with the enclosed wall fixtures. Mounting is possible either on the interior or exterior.



Please consider the following guidelines:

Interior mounting:

- The wirelessKey module has to be mounted directly within the interior door area.
- The recognition range has to be selected in such a way that the mobile phones can be already recognized in front of the door, however not surpassing into areas that are frequented by users. Depending on the conditions, the module can be mounted in an area shielded by walls or similar. If this is not possible, please consider the following paragraph.
- It is recommended to combine the wirelessKey module with a wall pushbutton in order to prevent unrequested “door openings”. The door is only unlocked in combination with pressing the wall pushbutton. See also chapter 8, opening procedure with authorized mobile phones.

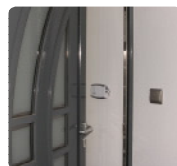

Exterior mounting:

- The wirelessKey module has to be mounted directly within the exterior door area.
- Please note that the module has to be protected from the elements.
- The temperatures for operation listed in the technical data sheet have to be considered.
- **!** It is important to mount the wirelessKey module appropriately to protect against sabotage. Please note that the switching circuits of the electro mechanic locking-system are connected directly with the module. By-passing the switching circuits can short-out the lock and open the door!

Assembly instructions:

Step 1: Inspection

Unpack your wirelessKey Professional module and check for possible visual damage. A damaged module may not be mounted. If the module is damaged, please contact one of the partners listed in the support chapter of this manual.



Step 2: Wiring the electro mechanic locking-system

The switching circuits necessary for controlling the electro mechanic locking-system have to be connected to the proper terminals according to the circuit diagram. The proper terminal layout can be found in chapter 12, electronic connection specifications.



It is not necessary to further connect the wirelessKey module. The switching circuits can be connected directly to the gate input of the electro mechanic locking-system.

Detailed instructions are provided in the user manual of your electro mechanic locking-system.


! Please contact the manufacturer of your locking-system if you cannot locate the appropriate connections.
If the cable is either too short or too long, a certified specialist can shorten or lengthen it at any time.

Step 3: Module feed

If the SOREX wirelessKey Professional module is properly attached to the locking-system, the feed with the originally enclosed adapter can be executed.

The module is now ready for use and can be set-up.

Connection details are provided in chapter 12.

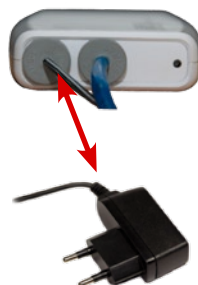

6. Description of operating modes

The wirelessKey module can be operated in two different modes. These can be selected with the configuration software (not included in delivery).

Standard-Mode:

The module is in standard-mode by default. In standard-mode, the opening procedure is initiated approx. 2 seconds quicker than in secure-mode. This mode has been especially developed for standard applications.

Secure-Mode:

The secure-mode differs from standard-mode by its speed and enhanced security. Within this mode several 128 Bit encoded ciphers are being submitted, additionally containing a random code.

7. Description of user configuration

Set-up: (manual konfiguration)

The configuration of the wirelessKey Professional module is performed with a button on the side of the device. This button is concealed for security reasons, in order to prevent from accidental activation. You will require a longish, thin object for pressing the button (see illustration).

For instance, a toothpick, a paper clip or a screw driver with a diameter of maximum 2.3 mm (0.09 inches) are suitable objects.



7.1 Addition of mobile phone

Note: The addition of users can be normally done with the PC Configuration Software. The discription for this is configuration is on your software cd included.

To configure your wirelessKey device manually with the konfiguration switch on the module, you have to activate this switch on the pc software. Default this function is disabled and the konfiguration is not possible in delivery status.

Manually konfiguration: (default at delivery status)

Step 1: Activation of mobile phone

Activate the Bluetooth function of your mobile phone and switch the Bluetooth mode to "visible".

With most mobile phones the activation of the Bluetooth function can be found as menu item "connections". Here you can select to make the Bluetooth mode visible.

- ! The Bluetooth connection of your mobile phone has to remain in visible mode for every future access.

Step 2: Activation of wirelessKey module

Press the button on the inside of the hole (see illustration) as far as it will go until a single signal tone can be heard. This takes 3 seconds.

Let go of the button and another signal will be sounded, indicating that the device is visible and ready for configuration.



- ! Please note that for security reasons the device will only remain visible and in configuration mode for 3 minutes after pressing the button. When time is up, another signal will be sounded during processing.
If the set-up (addition of new mobile phone as key) is not completed within this timeframe, you will have to restart the process. Therefore, the initial preparation of the mobile phone is recommended (see Step 1, activation of Bluetooth).

Step 3: Recognition range set-up

The wirelessKey Professional module allows you to choose the recognition range freely, i.e. the range that has to be reached in order to activate the opening process.

The distance that is being kept at the moment when you add your mobile phone as a key to the system will be saved as future recognition range (see Step 5, input of mobile phone confirmation code).

As the wirelessKey module can be also mounted inside the house, it is recommended that during the addition of the mobile phone you exit and close the door to ensure the proper selection of the range.

- ! The range configuration can take up to one minute during initial set-up. While the configuration is processed, the wirelessKey module will emit consecutive signal tones in short intervals.
Successful configuration is signaled with a long, high-pitched tone. If an error is encountered during set-up, the device will emit a long, low-pitched signal tone.
It is important to keep the desired opening range until the recognition range is saved. Please move your mobile phone as little as possible during this process.

i Information: Most mobile phones request a confirmation for the first access after the code is entered. Therefore, please keep an eye on your mobile phone!

Step 4: Calibration of wirelessKey module

The SOREX wirelessKey module has been developed to adapt itself automatically to the location at hand, offering improved functionality. This adaptation is being processed during the initial addition of a new mobile phone. The calibration process is completed during the set-up of the recognition range (see Step 3).

Therefore, the addition of the first mobile phone as key is advisable only after the wirelessKey module has been mounted. If a mobile phone has been added prior, the wirelessKey module can be “reset” (see chapter 20, overview pushbutton operation) to its original set-up and the calibration can be restarted.

Step 5: Addition of new user (mobile phone)

! Please note that for security reasons there remain only 3 minutes for the addition of new users after pressing the wirelessKey pairing button (Step 2).

Take your Bluetooth activated and visible mobile phone (see Step 1). Open the menu option “Bluetooth” on your device and begin the search for Bluetooth-able devices in reach. Most mobile phones include this option under “search Bluetooth devices”.

As the name of this menu option can vary by type mobile phone, it is recommended to consult your mobile phone’s user manual.

Your mobile phone will display the search results in form of a list after the search for Bluetooth devices is completed.

Select **“add.SOREX-w.Key”** from the list.

Your mobile phone will inquire if you would like to establish a connection with this device. Please confirm with “Yes”.

You will now be prompted to enter the connection code.

This is a 10-digit code (Pairing-PIN) which you will find as a package insert in your original packaging.

! Keep the code secure as it will be requested for each addition of new devices.

After you have entered the code, please confirm and your mobile phone will add **add.SOREX-w.Key** to the list of connected devices on your phone.

- ! Please note that the **add.SOREX-w.Key** may not be deleted from the list if you use your wirelessKey module in **secure-mode**, as in that case the 10-digit code will have to be re-entered upon the next entry. If you use the system in **standard-mode**, the **add.SOREX-w.Key** can be deleted from the mobile phone.

Step 6: Completion

Please note that the recognition range is also saved during the completion process (see Step 3). Therefore, the desired opening range has to be kept until the short signal tones of the wirelessKey module are replaced by a long, high-pitched sound.

The mobile phone is now authorized to unlock your door.

- ! Some mobile phones inquire if the connection should be established automatically. Please respond with "Yes". Additionally, it is possible that – in combination with this question - your mobile phone will provide the option "do not ask again". This can be selected if wished. The door will automatically unlock upon approach, no additional key has to be pressed on your mobile phone.

Each additional user can be added following the same Steps 1 through 6.

- ! Removal and re-addition of users can be performed any number of times. Please note that your wirelessKey Professional has limited storage capacity (25, 250, 2500 users). If this storage is full, a user has to be removed in order to be able to add a new one.

7.2 Removal of mobile phone

Note: The removal of users is also possible with the software (not included in delivery)!

If you are in possession of the mobile phone to be deleted, please follow the following steps (otherwise continue with 7.3):

Step 1: Activation of mobile phone

Activate the Bluetooth function of your mobile phone. Detailed instructions are listed in chapter 7.1, addition of mobile phone (Step 1).

Step 2: Activation of module

Press the button on the inside of the hole (see illustration) as far as it will go until the second signal tone can be heard. This takes 6 seconds.

Let go of the button and a two-tiered sound (two tone melody) will follow, indicating that the wirelessKey module is now visible and ready for configuration.



Step 3: Search for devices

Now you will look again for devices, following instructions from chapter 7.1, addition of mobile phone (Step 5).

Once the search for Bluetooth devices is completed, your mobile phone will display the results in form of a list.

Step 4: Removal process

Please select "del.SOREX-w.Key" from the list.

Your mobile phone will inquire if you would like to establish a connection with this device. Please confirm with "Yes".

You will now be prompted to enter the connection code. This code is the same for all wirelessKey modules and is "1234". You can also find the code as a package insert in your original packaging.

After you have entered the code, please confirm and your mobile phone will add del.SOREX-w.Key to your list.

As soon as the process is complete, the wirelessKey module will sound four times.

Step 5: Completion

Please delete "add.SOREX-w.Key" and "del.SOREX-w.Key" from the list on the mobile phone. You are no longer connected with the module.

7.3 Deletion of all users (Reset)

If you would like to delete all mobile phones of the user list, press the button until the signal tone is sounded 4 times. This will take about 15 seconds.

After the fourth signal tone, a long four-tiered melody will be sounded for confirmation.



The device deletes all users and resets your wirelessKey module to factory settings. Delete also the linking from your mobile phone. After this the wirelessKey module will restart. Wait for a short three-tiered melody. This can take a couple of seconds.

Now new users may be saved to the device with the help of the 10-digit code.

7.4 PC software set-up

Besides the manual configuration using directly the module's multifunction button, there is the option to set-up the wirelessKey Basic with the help of computer software.

This software can be purchased from an authorized SOREX dealer.

The manual "Configuration Software Basic" contains detailed information regarding the use of your wirelessKey module with this software.

8. Opening procedure with authorized mobile phones

No code required!

No additional code has to be entered for the opening process after a mobile phone is authorized (chapter 7.1, addition of mobile phone). The opening process - unlocking the door - is automatically initiated once you are within the recognition range and Bluetooth has been activated on your mobile phone.

! If a code is requested, you have not confirmed the option "auto-connect" on your mobile phone. This can be completed at any time (see mobile phone user manual).

There will only be one opening process after entering the recognition range!






 
Once you enter the recognition range with an authorized mobile phone, a one-time opening process is initiated.

No further opening process will follow until the mobile phone has left the range for about 10 seconds.

i **NOTE:** The same effect is achieved by deactivating Bluetooth on your mobile phone for at least 10 seconds.

This setting can be deactivated with the software.

9. Summary of adaptable locks

Application	Illustration	Security Level
wirelessKey with digital cylinder		high
wirelessKey with electric push control		high
wirelessKey with motor lock		high
wirelessKey with electric door opener		medium
wirelessKey with garage door drive		high
wirelessKey with automatic door		high

Digital cylinder:

The digital cylinder is installed directly into the door wing replacing the mechanic cylinder lock (keyhole). It is deactivated in idle state (the rotation of both knobs does not result in unlocking the door).

The digital cylinder is coupled by approaching the wirelessKey module with an authorized mobile phone (the door can be locked and unlocked manually by the rotation of one of the two knobs). The digital cylinder is powered by battery (lifetime 5-7 years) and no wiring is necessary. It communicates wireless with the wirelessKey module. The maximum distance between digital cylinder and wirelessKey module is 30 cm (11.8 inches), 60 cm (23.6 inches) for the special design (not included in delivery).



Power lock:

The power lock is installed directly into the door wing. The mechanic cylinder lock has to be dismantled and replaced by the power lock. The power lock needs permanent power supply, wiring is necessary.



A closed door is always in a locked mode with this system. By approaching the wirelessKey module with an authorized mobile phone, the bolt is retracted by an electric motor and a spring is tightened. Thus, the door is unlocked automatically on approach.

The door does not have to be modified, except for providing proper wiring. The power lock fits exactly into the existing mechanic lock cut on the door wing.

Electric push control:

The push control is installed directly into the door wing. The mechanic cylinder lock has to be dismantled and replaced by the push control. The push control needs permanent power supply, wiring is necessary.



A closed door is always locked. By approaching the wirelessKey module with an authorized mobile phone, the push control is activated. The bolt is retracted by employing the door handle and a spring is tightened. The door is unlocked conveniently by pushing the door handle.

Electric door opener (mainly used with intercom systems):

The electric door opener is installed into the doorframe, not into the door wing as required by other systems. It needs permanent power supply. The door wing itself does not have to be modified.

A door knob has to be installed on the outside of the door instead of a door handle, a handle remains on the inside.



By approaching the wirelessKey module with an authorized mobile phone, the electric door opener is activated and the door can be opened. Entrance without an authorized mobile phone is not possible, exit from the inside is granted at any time. However, in this case the door is not effectively locked, but rather cannot be opened from the outside as there is no door handle.

Garage door drive:

SOREX wirelessKey can be utilized with virtually any garage door drive. The only condition is a floating contact.

Also, the following has to be taken into consideration when employing the wirelessKey system with a garage door drive:

Over large distances, the opening of the garage door should only be initiated with the Bluetooth handheld transmitter available by SOREX (not included in delivery). The handheld's button has to be pressed in order to initiate the opening process. This opening process can be activated from distances up to 100m (328 feet). The handheld control can be only connected with the wirelessKey by using special software.



In addition, the opening with an authorized mobile phone is also possible. The maximum range is 14m (46 feet). As the garage door would automatically be opened upon approach within range, the combination of the wirelessKey system with a wall pushbutton or motion sensor is recommended.


The opening process can be initiated as follows:

- Handheld transmitter (by pressing a button)
- Mobile phone (by entering within range with the mobile phone and recognition by the motion sensor or use of a wall pushbutton)



Automatic door:

The opening system of automatic doors is not modified. The wirelessKey module has to be connected with the door system by a floating contact to activate the automatic door.

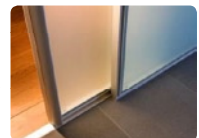

The automatic door opens independently when an authorized mobile phone approaches the wirelessKey module. The door closes after several seconds and does not need to be locked again if the door control unit is set on "locked".

10. Combination with wall pushbuttons

If desired, the wirelessKey Professional module may also be combined with wall pushbuttons. This combination is mainly recommended if the wirelessKey module is mounted in the interior of the house. The configuration of the wirelessKey in combination with wall pushbuttons requires a configuration software.



To initiate an opening process two conditions are to be fulfilled at the same time:

- An authorized mobile phone has to be within the recognition range.
- The wall pushbutton has to be pressed for approval.

If both conditions are present, the opening process is initiated.

10.1 Summary of adaptable pushbuttons

Das wirelessKey Modul kann in Kombination mit folgenden Tastern verwendet werden:

Radio pushbutton

The radio pushbutton needs no wiring on assembly and is connected with the wirelessKey module via radio link. The pushbutton can be attached to the wall with screws or adhesive tape.




The radio pushbutton may only be mounted on the exterior of the door if this area is not subject to weather conditions.

Wired pushbutton with display unit

The pushbutton is directly mounted on the exterior with a flush fitting box on the wall. It is connected to the wirelessKey module through the wall. The wirelessKey module features a standard dedicated input for the wiring.



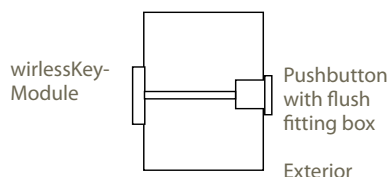


 


Additionally, the status of the wirelessKey module is shown on the display unit.



10.2 Application overview

A pushbutton on the exterior or on the exterior and interior is recommended depending on the use of an electro-mechanic locking system.


Application	Illustration	Pushbutton interior	Pushbutton exterior
wirelessKey with digital cylinder		yes (recommended)	yes (recommended)
wirelessKey with electric push control			yes (recommended)
wirelessKey with power lock		yes (recommended)	yes (recommended)
wirelessKey with electric door			yes (recommended)
wirelessKey with garage door drive		yes (recommended)	yes (recommended)
wirelessKey with automatic door			yes (recommended)

11. Care and maintenance


The wirelessKey system does not require particular maintenance. Please note however, that it is an electric device. Exposure to the elements - such as extreme temperatures, contact with water, and so forth - should be avoided.

12. Electronic connection specifications

1. Voltage supply:
The enclosed adapter is connected to terminals V+ and V-.
2. Locking system outlet (see chapter 13, terminal connection diagram):
 - a. Floating contact (only one relay is switched)
The switched contact has to be connected to terminals A1 and A2, terminals V+ and GND have to remain open. The initiation time is 5 seconds and can be adjusted freely with the proper software (not included in delivery).
 - b. Utilization with internal module supply voltage (supply voltage is emitted through relay)
The switched contact has to be connected to terminals [A1, GND], terminals V+ and A2 have to be connected (bridged).
3. Floating / full-voltage input (e.g. for wall pushbutton):
The input has to be activated with the proper software (not included in delivery)!
 - a. When connecting an external voltage (6-24V DC) to the input terminals (E+, E-), the jumpers are to be placed as illustrated below.

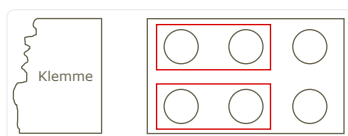


- b. When operating with a floating contact (pushbutton) at the input, the jumpers are to be placed as illustrated below.

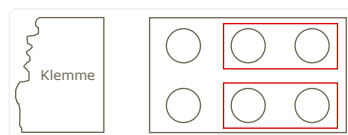


4. If needed, LEDs (LEDgr, LEDor, LEDro, GND) can be placed at the outputs without additional series resistor (optional).

Terminal connections:

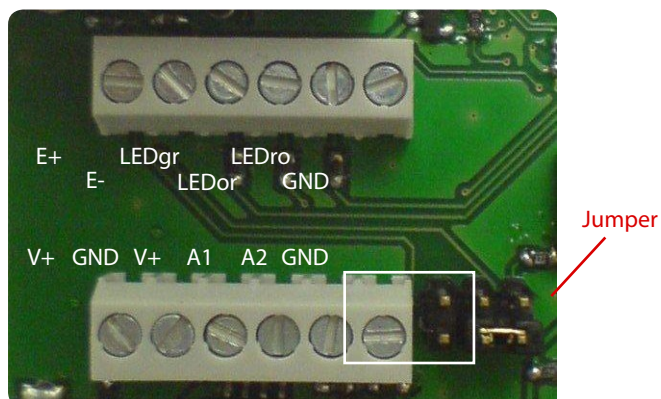


V+	supply (adapter, 6-24V DC, cable with white line)
LEDgr	Led, grün
LEDor	Led, orange
LEDro	Led, rot
GND	Ground
A1	see chapter 12, electronic connection specifications
A2	see chapter 12, electronic connection specifications
E+	input for pushbutton / radio control and external voltage (+)
E-	output for pushbutton / radio control and external voltage (-)

13. Terminal connection diagram for floating contact, for example Simons Voss digital cylinder:

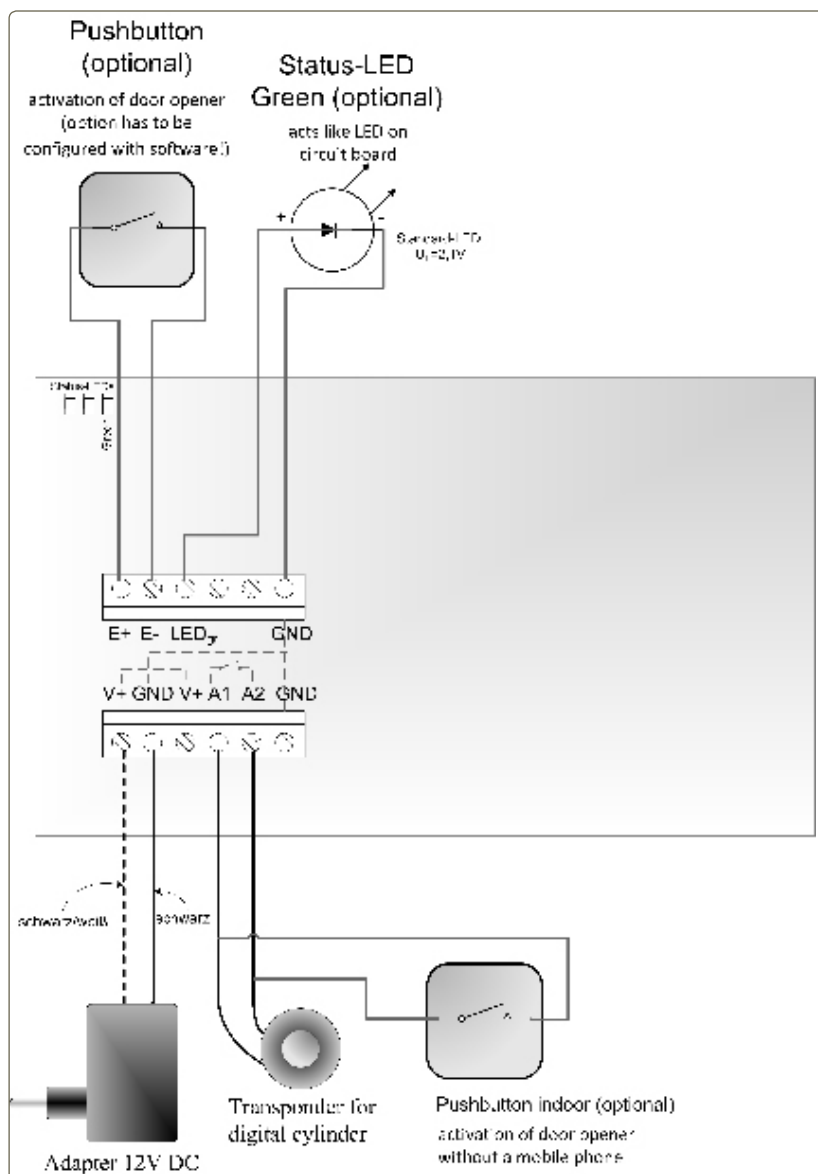

14. Terminal connection diagram: Electric latch bolt

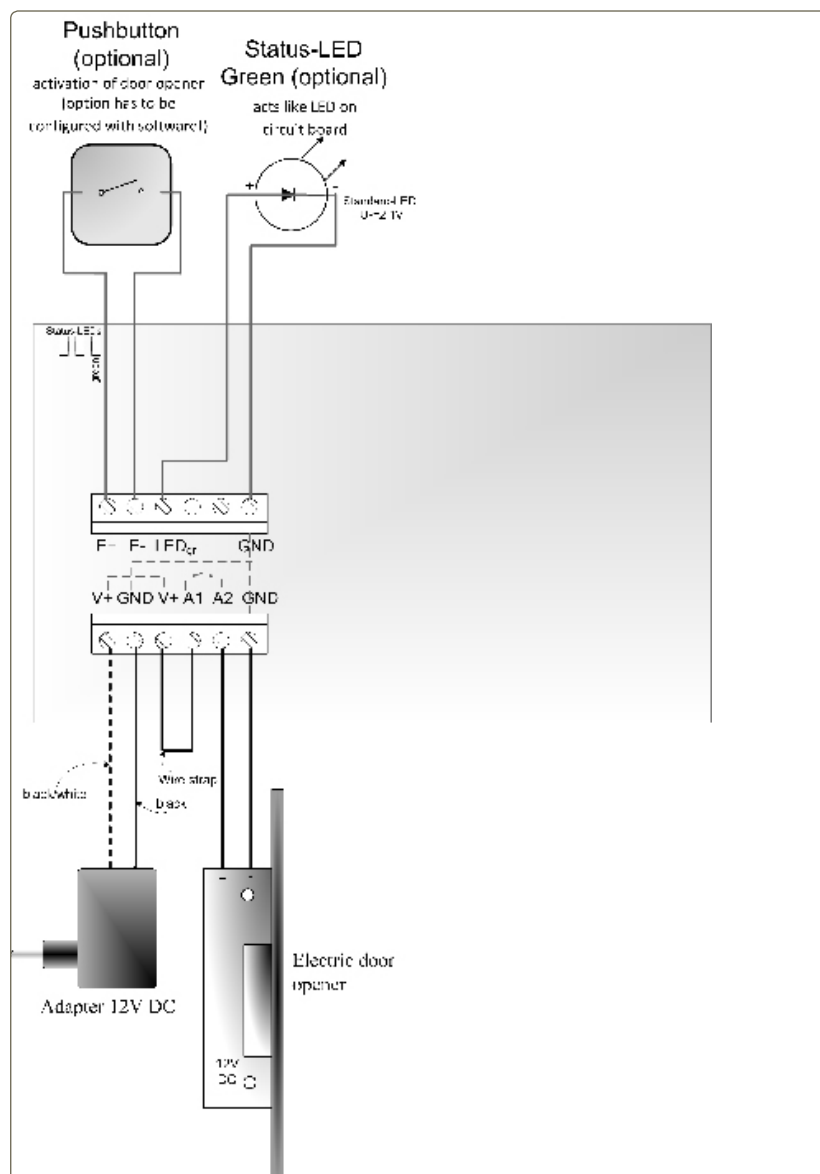

15. Tested mobile phones

Manufacturer:	Model:	Standard-mode:	Secure-mode:	Notes:
Nokia	5500	✓	✓	
	7650	✓	✓	
	6230i	✓	✓	
	6131	✓	✓	
	6280	✓	✓	
	E50	✓	✓	
	8910	✓	✓	
	3600	✓	✓	
	6600	✓	✓	
	6500c	✓	✓	No signal tone upon first addition, but invisible-tone mode
	6021	✓	✓	
	6120c	✓	✓	
	6151	✓	✓	
	5310	✓	✓	
	5300	✓	✓	
	E61-1	✓	✓	
	6233	✓	✓	
	6125	✓	✓	
Sony-Ericsson	T68	✓	✓	Bluetooth is only visible for 3 minutes and has to be switched visible for each opening procedure.
	W710i	✓	✓	
	K750i	✓	✓	Connection to internet has to be allowed when setting the Bluetooth connection
	Z550i	✓	✓	
	Z10	✓	✓	
	P910iR	✓	✓	Input on display keypad (Attention: limited time for PIN input!)
	M600i	✓	✓	
	W950i	✓	✓	

Manufacturer:	Model:	Standard-mode:	Secure-mode:	Notes:
Sony-Ericsson	K700i	✓	✓	
	K510i	✓	✓	
	W880	✓	✓	
	K320i	✓	✓	
	K530i	✓	✓	
Motorola	A1000	✓	✓	
	L6	✓	✓	Bluetooth is only visible for 60 seconds and has to be switched visible for each opening procedure.
	V550	✓	✓	Bluetooth is only visible for 60 seconds and has to be switched visible for each opening procedure.
	KRZR K1	✓	✓	Bluetooth is only visible for 60 seconds and has to be switched visible for each opening procedure.
	V3	✓	✓	Bluetooth is only visible for 60 seconds and has to be switched visible for each opening procedure.
(Siemens)-BenQ	S65	✓	✓	Bluetooth is only visible for 10 minutes.
	AP75	x	x	Bluetooth cannot be switched visible.
	S81	x	x	No connection possible
	S68	✓	✓	
	SK65	✓	✓	
	M75	✓	✓	
	EF81	✓	x	
Samsung	EGH700	✓	✓	Request of roster can be terminated.
	U600	✓	✓	
	D900i	✓	x	
LG	KG800	✓	✓	

Manufacturer:	Model:	Standard-mode:	Secure-mode:	Notes:
Blackberry	8700	✓	✓	
	8100	✓	✓	
	8800	✓	✓	
	7100	✓	✓	
	7290	✓	✓	
	8310	✓	✓	
	8300	✓	✓	
	(MDA) Touch	✓	✓	
Dell	Axim X30	✓	✓	
HP	6816	x	x	
	Voice Messenger	x	x	
	514	x	x	
	6515	✓	✓	Select "always allow to connect" after pairing
	6915	✓	✓	
T-Mobile	SDA II	✓	✓	
	XDA II	✓	✓	
Vodafone	VPA Compact III	✓	✓	Select "finish" after the device is no longer busy or the door has been unlocked for the first time.
Apple	iPhone	✓	✓	Visible shown only in Bluetooth menu.
Asus	P525	✓	✓	
VK	VK2020	x	x	Only 5-digit codes are supported.

16. Error sources

The mobile phone does not find the device:

1. Ensure that the wirelessKey Basic module is in "addition" mode. If you are not certain, wait and try to re-activate the wirelessKey Basic module for the search by pressing the button until the signal is sounded.
2. Ensure that you are not outside the selected range or behind a solid wall.

3. Please keep in mind that the wirelessKey module is only active in the “addition” mode for 3 minutes. The module could have deactivated during the search for the device.
4. Ensure that your mobile phone is switched to “visible for others”. Enter the Bluetooth menu and select “visible” for your mobile phone.
5. Check if the wirelessKey appears on your list.

The device does not sound when the button is pressed:

1. Ensure that the device is connected to a power supply.
2. Ensure that the button on the inside of the hole is being pushed.

The device has unintentionally sounded more than one time:

If you press the multifunction button for too long, the signal is sounded a second time. Press the multifunction button briefly in order to exit the current program mode. Now you can restart with the set-up.

No melody follows the one-time signal sound:

You are either still in the addition or deletion mode or have pressed the button again. Simply wait until the wirelessKey Basic module is deactivated. You will hear a dual tone sequence. You can also exit the current mode by briefly pressing the multifunction button. Now you can try again. Depending on how many signal tones you are waiting for, a melody will be audible.

Please note that the melody will only sound after the button is released following the signal tone.

The connection is not established after code input:

Check if you have entered the code correctly.

Please keep in mind that the wirelessKey is only active in the “addition” mode for 3 minutes. The device could have deactivated during the code input. Please repeat the process.

You can repeat the code input any number of times without being locked.

Also, please check if other devices are being included in the list of “connected devices” on your mobile phone.

It could be possible that your mobile phone does not permit additional connections. In this case, at least one of the existing connections has to be deleted from the list on your mobile phone.

The connection times-out before I can activate my mobile phonen:

Adjust your mobile phone in a way that you only have to select “new devices” and activate the module at this point. Usually, “**add.SOREX-w.Key**” will be found instantly. Most mobile phones can disconnect the search and continue with “**add.SOREX-w.Key**” at this stage. Keep your code available and press “OK” only if you would like to maintain the range of the device for the future.

I cannot locate my code:

Please contact one of our service technicians.

The device has to be returned and furnished with a new code.

Our service technicians – listed in chapter 20, support - are at your disposal for any possible error sources.

17. Technical specifications

17.1 SOREX wirelessKey

Voltage supply:	6.....24V DC, 2 W
Voltage at input:	6.....24V DC
Output for supplying a door opener:	6.....24V DC, max 10 W
One floating relay-output:	max. 1.2A, 50V DC
Switching capacity:	max. 10 W
Measurements L x W x H:	147 x 90 x 25 mm (5.79 x 3.54 x 0.98 in)
Recommended working temperature:	-20°C ... +60°C (-4°F to 140°F)
Equipment:	
• 1 floating optocoupler input	
• Adjustable range	

17.2 Certificates

Bluetooth™

FCC - Rule Parts 15C

CE - EC/2006/20013

ROHS

17.3 Bluetooth



Bluetooth[®]

Initially, Bluetooth was developed by Ericsson beginning in 1994 to enable a wireless connection between mobile phones and additional devices. With the intention of establishing a de facto standard, the Bluetooth SIG was founded in cooperation with industry partners in 1998. It was the goal to create the specifications for a constructive unit with the double-function of transmitter and receiver with low production costs, flexible application possibilities, low energy needs, resilience towards flaws and the ability to transmit data for multimedia applications. Today, Bluetooth is considered industry standard (IEEE 802.15.1) for the wireless radio connection of devices. This network is called also a Wireless Personal Area Network (WPAN).

- Compatibility with all Bluetooth enabled devices (about 2 billion units worldwide)
- High wireless transmission stability based on the frequency jumping process (1,600 jumps per second)
- Highly secure transmission: 128 Bit encryption
- Wide range: up to 100 meters (328 feet)
- Routing via own modules
- Small, compact design of the wireless modules

18. Warranty and liability

SOREX Wireless Solutions grants a warranty of six months for this product. An invoice is to be provided as proof of purchase.

SOREX shall not be liable for any incidental or consequential damages or injuries resulting of the misuse or use of the product in against instructions of this manual. All claims out of tort or otherwise – regardless of the theory of claim – as a result of a possible defective delivery or the incorrect execution of a service provided by SOREX, are explicitly excluded. Further details can be found in the AGBs of the SOREX Wireless Solutions GmbH Company.

20. 19. Overview pushbutton operation

0,5 sec	-> 1 signal tone (low): back to standard-mode
3 sec	-> 1 time signal tone: add mobile phone (add.)
6 sec	-> 2-tier signal tone: delete mobile phone (del.)
9 sec	-> 3-tier signal tone: connect with PC (adm.)
15 sec	-> 4-tier signal tone: reset (to factory settings)
18 sec and up	-> 1 signal tone (low): back to standard-mode

20. Support

Manufacturer:



SOREX – Wireless Solutions GmbH
Herzog Leopold Straße 5
2700 Wr. Neustadt

Tel.: +43676/9739012
Fax: +432622/32013-15

E-Mail: support@sorex-austria.com
Web: www.sorex-austria.com

Your Distributor:

Please note the GTC
of SOREX Wireless Solutions GmbH